

FELDBERGSTRASSE 42

COFFEE CAN INCREASE YOUR LIFESPAN

How to use our coffee machine

OPERATING THE ESPRESSO MACHINE



1) MAKE SURE IT IS ON AND HAS WATER



2) PUT COFFEE INTO THE PORTAFILTER



3) PULL LEVER UNTIL FILLED, THEN PUSH DOWN

REMARKS

- Please do not change any settings on the espresso machine or mill.
- Only use the Haenowitz&Page Villain coffee in the mill. Should you want different coffee, please use the hand mill.
- Make sure the lever is fully descended after making coffee, otherwise the machine will overheat.



TROUBLESHOOTING

COFFEE BITTER

If the coffee is bitter then the machine has overheated, check that all the levers are down as shown in the image and that the temperature is in the 90-94 range.



TROUBLESHOOTING COFFEE BEANS

If there are no more beans, you can find new one in the drawer.



TROUBLESHOOTING

POWER

If there machine is not on there are multiple reasons.

- There can be no water in the tank. Please fill it up.
- The machine can be turned off, check that the power lever bottom left is up.
- The mains can be disconnected due to time switch, see power manual.



TROUBLESHOOTING

WATER AND WASTE

If there is flooding around the machine please empty the water receptacle.

Oh and even better empty it before there is flooding.

The coffee waste collector below the mill should be occasionally be emptied into the bin.

