


# SIMPLE: STREAMING



1) TURN ON THE AMPLIFIER



2) SWITCH TO OPT1

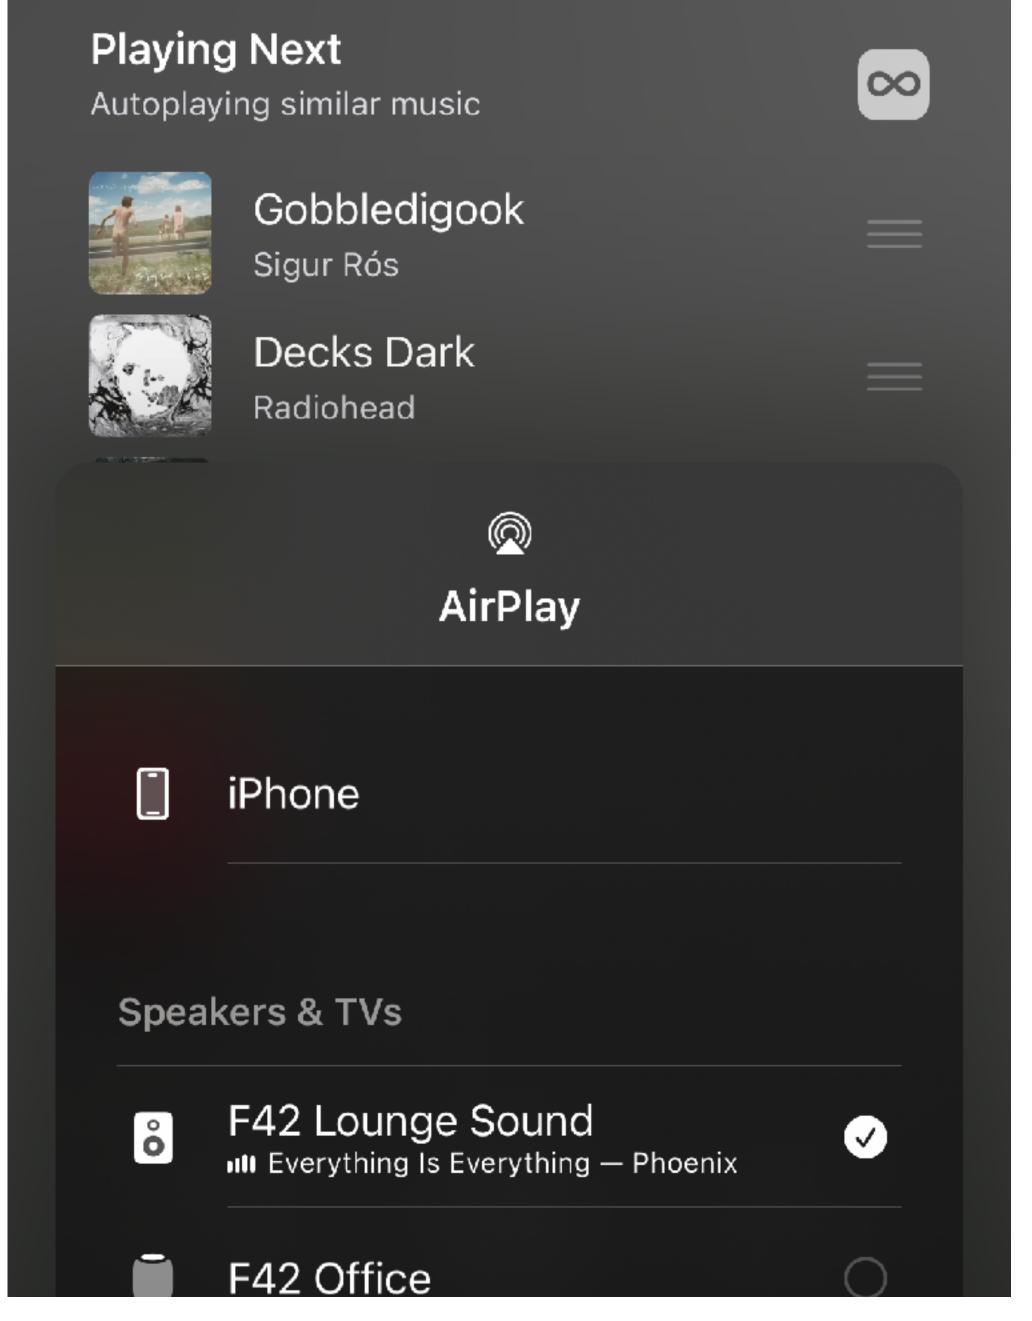

3) STREAM FROM DEVICE



4) ADJUST VOLUME




WHEN FINISHED TURN OFF THE AMPLIFIER

# ADVANCED: TURNTABLE



1) TURN ON THE AMPLIFIER

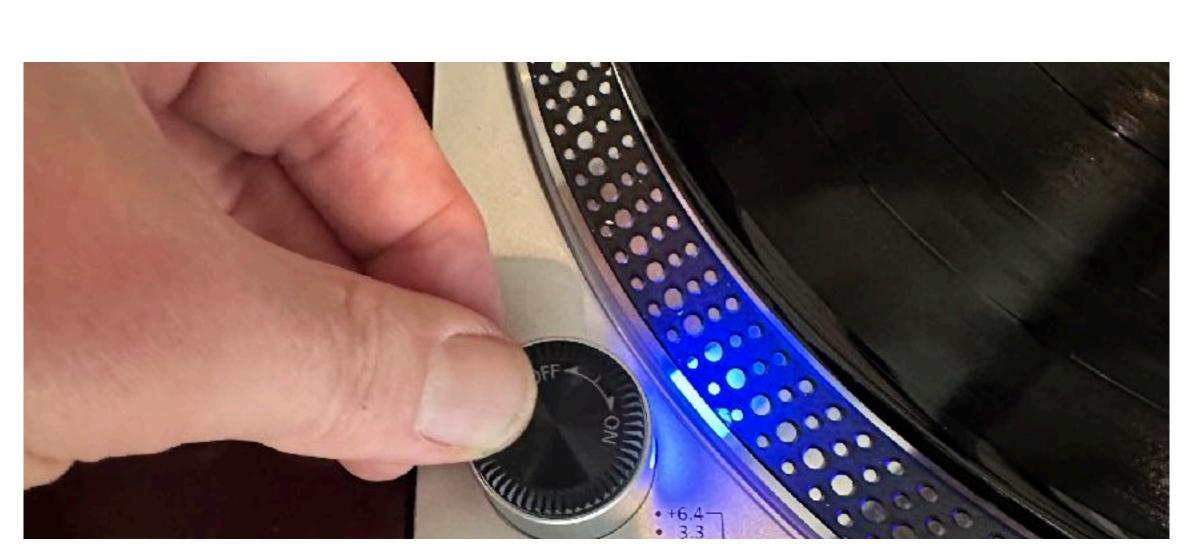

3) TURN ON THE TURNTABLE



2) SWITCH TO PHONO



4) PUT RECORD ONTO THE PLAYER




5) SELECT APPROPRIATE SPEED



7) MARK SURE ARM LEVER IS IN THE UP POSITION



6) UNLOCK ARM RETENTION BRACKET (GENTLY)

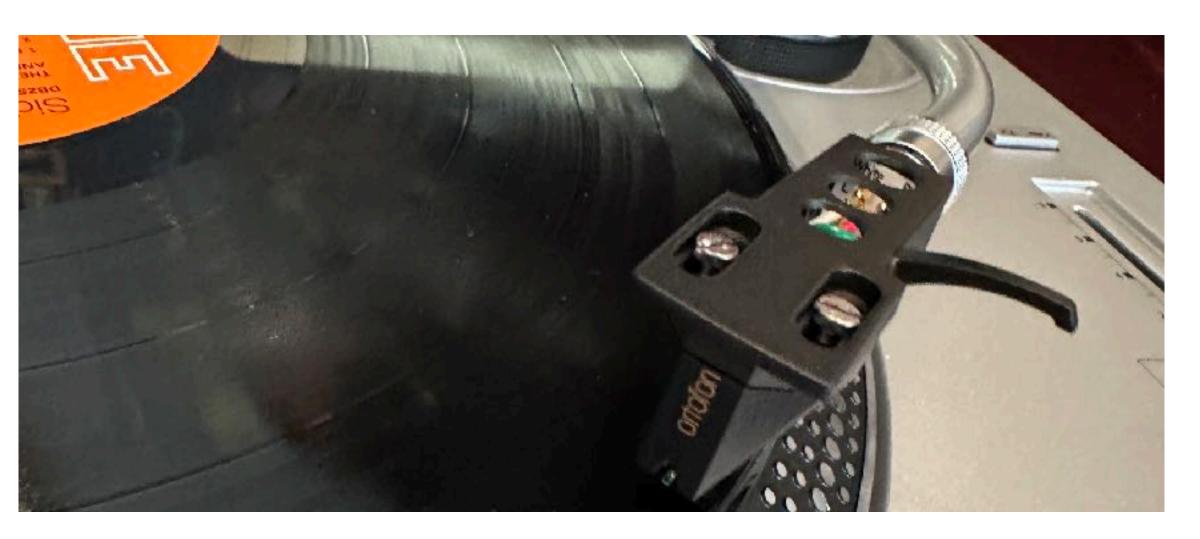

8) MOVE ARM OVER RECORD








10) PRESS START BUTTON



1) WHEN YOU ARE FINISHED, PRESS THE STOP BUTTON



3) MOVE THE ARM INTO THE ARMREST

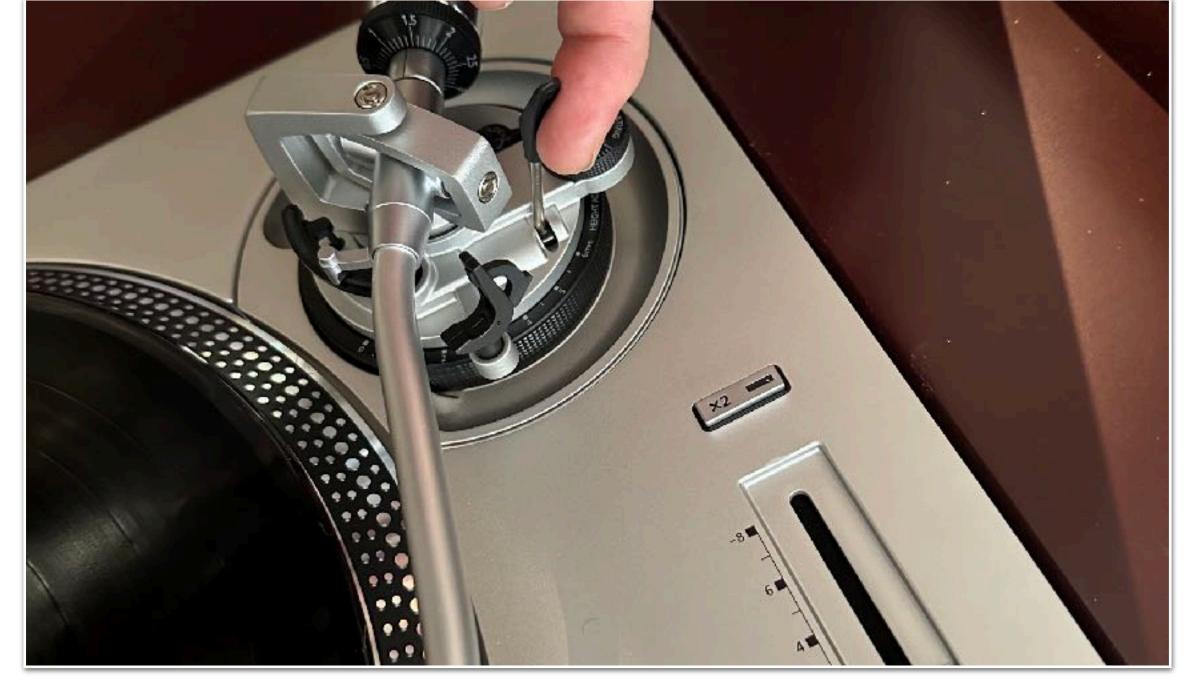

2) MOVE THE ARM LEVER INTO THE UP POSITION



4) ENGAGE THE ARM RETENTION BRACKET (GENTLY)



5) TURN OFF THE TURNTABLE



6) TURN OFF THE AMPLIFIER

### REMARKS

- Please take care when using the turntable
- Record are here to be used, so only bring your records if you can stand others using them
- No scratching

#### **TROUBLESHOOTING**

### POWER

The power is managed with a smart socket. Should you want to use the sound system outside of regular hours you can manually switch it on on the side of the smart socket

